


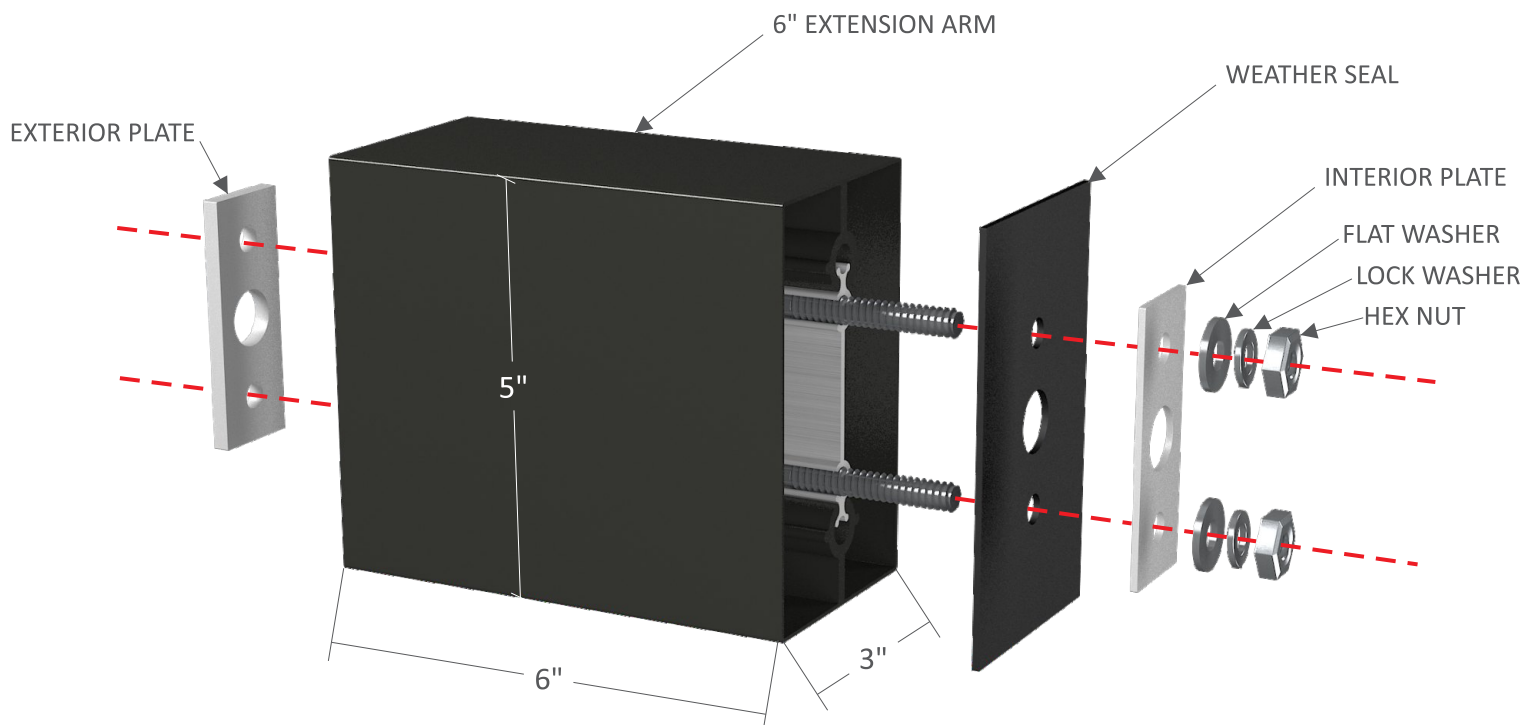

EXTENSION ARM - 6" RECTANGLE

Remove the pre-installed adjustable extension arm, and replace with rectangle extension arm.

- Open fixture by removing screws on face.
- Remove bolts holding adjustable arm in place, and detach arm, leaving the wire outside of the fixture.
- Feed wire through Weather Seal first, followed by the Extension Arm, then the center hole in the Exterior Plate.
- Install flat washer, lock washer, and hex nut inside fixture.





EXTENSION ARM - 6" RECTANGLE

Remove the pre-installed adjustable extension arm, and replace with rectangle extension arm.

- Open fixture by removing screws on face.
- Remove bolts holding adjustable arm in place, and detach arm, leaving the wire outside of the fixture.
- Feed wire through Weather Seal first, followed by the Extension Arm, then the center hole in the Exterior Plate.
- Install flat washer, lock washer, and hex nut inside fixture.

